

How should I install a pH Sensor?

A pH sensor must be at least 15° above horizontal to consistently function properly. DO NOT install sensors in a port perpendicular to the vessel wall. The liquid in the sensor contains small air bubbles. If not inclined slightly above horizontal, a bubble can adhere to the pH bulb where it will affect the sensor's performance.

The contents of this publication are presented for information purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding products or services described herein or in their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the design or specification of such products at any time.

© 2024 Broadley-James Corporation. All rights reserved. Visit www.broadley-james.com/trademarks for trademark information.

FAQ-237
TMP-BF-102101



North America and Pacific

Email: sales@broadleyjames.com
Web: www.broadleyjames.com

Phone: 949-829-5555
Tollfree: 800-288-2833
Fax: 949-829-5560

19 Thomas, Irvine CA, 92618 USA

United Kingdom and EU Countries

Email: sales@broadleyjames.co.uk Phone: +44 (0)1525 862518
Web: www.broadleyjames.eu Fax: +44 (0)1525 862811

Wrest Park, Silsoe Beds MK45 4HS, UK